



CR271ML

QUICK START GUIDE

 
Multimedia Receiver with Bluetooth and SiriusXM-Ready™ featuring a 7" Touch Screen Display

This Quick Start Guide gives you the basics to start using your CR271ML. Please visit www.jensenmobile.com to download a complete owner's manual or call customer service at 1-888-921-4088 (Monday-Friday, 9AM-5PM EST).



JENSEN®

Installation

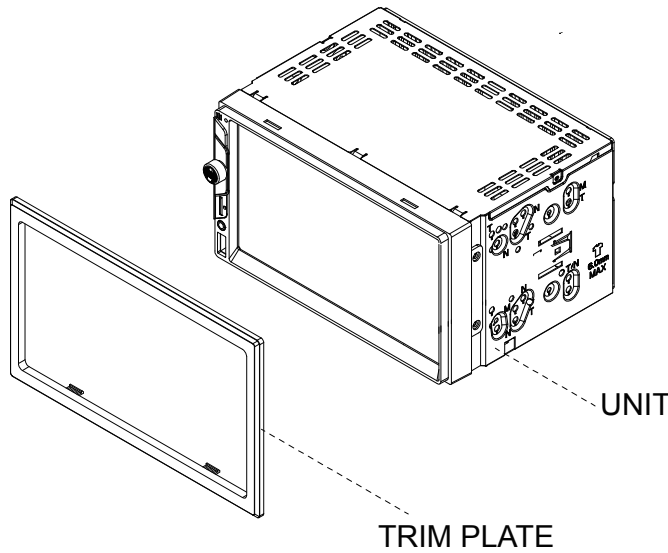


TYPICAL FRONT-LOAD DIN MOUNTING METHOD

Copyright and Trademark Notes

The *Bluetooth®* word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The microSD logo is trademark of SD-3C LLC. Siri and Apple are registered trademarks owned by Apple Inc. SiriusXM and all related marks and logos are trademarks of Sirius XM Radio Inc. All rights reserved. Google Assistant and Android are trademarks owned by Google LLC. Other trademarks and trade names are those of their respective owners.

 Wiring Diagram - Inputs/Outputs

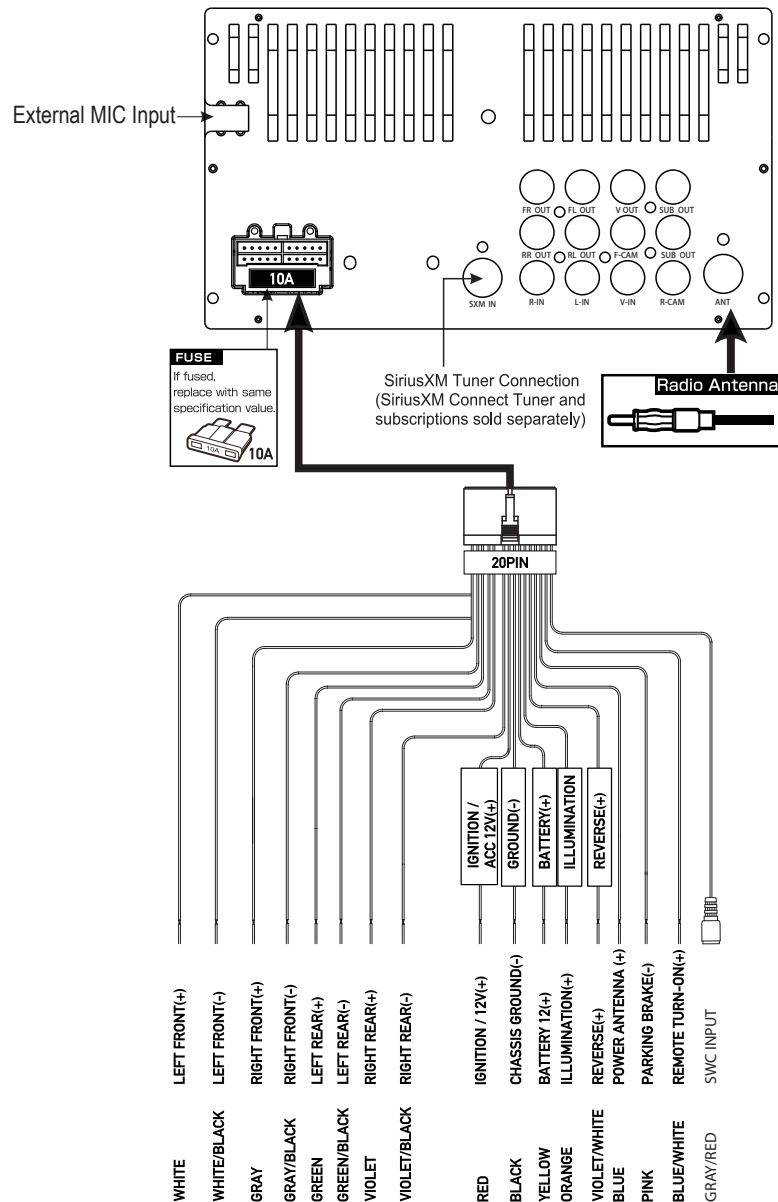


Control Locations



Remote Control

- | | |
|-----------------|-------------------------------|
| 1. Power | 16. Number keys |
| 2. Mode | 17. Root |
| 3. Play/Pause | 18. OSD (On Screen Display) |
| 4. Mute | 19. Local/Random |
| 5. Talk | 20. Seek Down/ Previous Track |
| 6. End call | 21. AS/PS/Repeat |
| 7. Setup | 22. Stereo |
| 8. Volume UP | 23. Stop |
| 9. Zoom | 24. Enter/Direct Tune |
| 10. Select | 25. Band |
| 11. Seek Up | 26. SiriusXM Skip Backward |
| 12. Volume Down | 27. SiriusXM Channel Up |
| 13. Audio | 28. SiriusXM Skip Forward |
| 14. * Key | 29. SiriusXM Channel Down |
| 15. Loudness | |

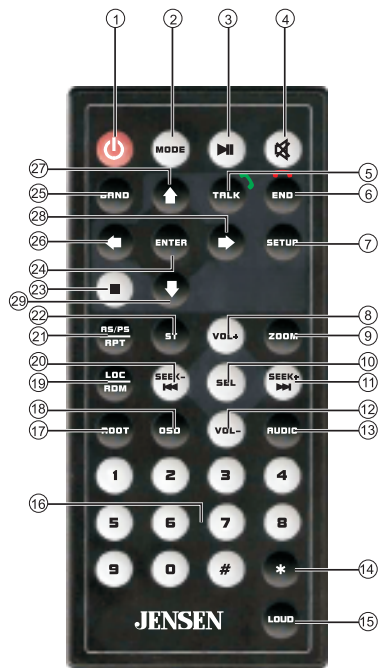 

Main Menu

In the Menu mode, press the desired icon to enter the corresponding mode: Radio, SiriusXM®, BT Phone, USB, microSD Card, BT Audio, Aux In, AV In, Camera, and Settings.



General Operation

Press the function icons to select the setup menu.



Audio Operation

Press Sound Effect icon in the Settings menu to select EQ Presets, Surround Settings, Fader and Balance controls.


1. EQ Settings
2. Surround Mode Settings
3. Fader/Balance



USB / microSD Card Operations

Insert USB device in the USB slot, and the unit will read the USB device. microSD operation will work the same way when you insert the microSD card into unit's microSD card slot.

- | | |
|------------------|---------------------|
| 1. Previous Menu | 7. Track UP |
| 2. Repeat | 8. Voice Activation |
| 3. Random | 9. Play/Pause |
| 4. Setup Menu | 10. Screen Dimmer |
| 5. File List | 11. Track Down |
| 6. Audio Setting | |

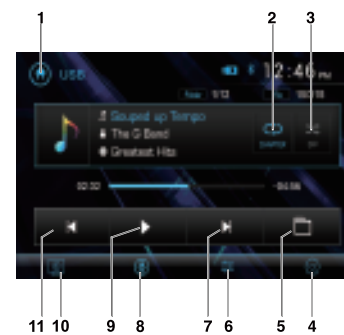 

Tuner Operation

Select the Tuner icon from the Main Menu screen or press MODE until Tuner is selected.

- | | |
|---------------------------|--------------|
| 1. Current Mode Indicator | 6. Preset |
| 2. Information Display | 7. Local/DX |
| 3. Tune Up | 8. Band |
| 4. AS/PS | 9. Tune Down |
| 5. Stereo/Mono | |



SiriusXM® Operation

- 1. Band**
Displays SiriusXM® radio band currently selected. Third bands are available: SXM1, SXM2, and SXM3.
- 2. Search**
Press this icon to search channels by category
- 3. Channel List**
Press this icon to see the preset channels per band.
- 4. Function**
Press this icon to list mode/Tune Scan/ Go to Live channels.
- 5. Channel Down**
Press this icon to select station backward manually
- 6. Channel Up**
Press this icon to select station forward manually
- 7. Skip Backward**
Tap this icon to skip to the beginning of the current song or prior songs. Press and hold to fast reverse.
- 8. Pause**
Press this icon to pause the audio.
- 9. Skip Forward**
Tap this icon to skip to the next song. Press and hold to fast forward.
- 10. Preset**
Press and hold to add the current channel to a preset. Tap to recall the preset. a total of 18 presets can be stored, 6 per band.
- 11. Content Info**
Press Song icon to cycle through song, content info and description field



Bluetooth Operation

Bluetooth Microphone

The built-in microphone is on the front of the receiver. External microphone is included, designed to mount on the visor or on a pillar inside the vehicle.

Preparation

Before you can use a Bluetooth device, it must be paired and connected. Make sure that Bluetooth is activated on your device before you begin the pairing process.

Pairing a New Device

The unit broadcasts the pairing signal constantly when no devices are currently connected. Complete the pairing sequence from your Bluetooth device. Refer to the owner's manual for your device for more details. The device name is "JENSEN CR271ML". The unit can be in any mode of operation when pairing is performed.

Connecting a Paired Device

Most Bluetooth devices support the auto-connect feature and will connect automatically if the device is in range when the unit is powered-on. If your device was previously paired but does not connect, enter the Bluetooth setup menu and ensure that Auto Connect is On.

Dialing a Number

Press to display keypad and dial a number.

Making and Ending a Call

Press to connect a call, and press to end a call.

Transferring Audio

Press to transfer audio between the head unit and mobile phone.

Streaming Audio

Press to play or pause the music. Press to skip to the previous track. Press to advance to the next track.

Phone Book

Press to download the phone numbers or access the call history info.



Voice Activation Operation

Bluetooth should be paired between your smartphone and the receiver. Press the voice activation button , and the receiver will switch into Bluetooth mode. This will activate Siri® or Google Assistant™ on your smartphone. You will need to manually switch back to the previous or desired mode once this operation is terminated.

APP Operation

The Jensen Smart App is the ultimate wireless remote control for your CR271ML receiver. You can download the Jensen Smart app from the Apple App Store or Google Play Store and install it on your smartphone or tablet.

Please scan the following QR code to download Jensen J-Link P1 App to your smart phone.



One-Year (or Two-Year*) Limited Warranty

This warranty gives you specific legal rights. You may also have other rights which vary from state to state. Namsung America Inc warrants this product to the original purchaser to be free from defects in material and workmanship for a period of one year (or two years*) from the date of the original purchase. Namsung America Inc agrees, at our option, during the warranty period, to repair any defect in material or workmanship or to furnish an equal new, renewed or comparable product (whichever is deemed necessary) in exchange without charges, subject to verification of the defect or malfunction and proof of the date of purchase. Subsequent replacement products are warranted for the balance of the original warranty period.

Who is covered?
This warranty is extended to the original retail purchaser for products purchased from an authorized JENSEN dealer and used in the U.S.A.

What is covered?
This warranty covers all defects in material and workmanship in this product. The following are not covered: software, installation/removal costs, damage resulting from accident, misuse, abuse, neglect, product modification, improper installation, incorrect line voltage, unauthorized repair or failure to follow instructions supplied with the product, or damage occurring during return shipment of the product. Specific license conditions and copyright notices for the software can be found via www.jensenmobile.com.

Warranty Coverage
Limited 1-year warranty when purchased from an authorized Jensen dealer.
or
*Limited 2-year warranty when purchased from and professionally installed by an authorized Jensen dealer. (Proof of purchase and Installation required)

What to do?
1. Before you call for service, check the troubleshooting guide in your owner's manual. A slight adjustment of any custom controls may save you a service call.
2. If you require service during the warranty period, you must carefully pack the product (preferably in the original package) and ship it by prepaid transportation with a copy of the original receipt from the retailer to an authorized service center.
3. Please describe your problem in writing and include your name, a return UPS shipping address (P.O. Box not acceptable), and a daytime phone number with your shipment.
4. For more information and for the location of the nearest authorized service center please contact us by one of the following methods:

• Call us toll-free at 1-888-921-4088 (Monday-Friday, 9:00 a.m. to 5:00 p.m. EST)

• E-mail us at cs@jensenmobile.com

Exclusion of Certain Damages: This warranty is exclusive and in lieu of any and all other warranties, expressed or implied, including without limitation the implied warranties of merchantability and fitness for a particular purpose and any obligation, liability, right, claim or remedy in contract or tort, whether or not arising from the company's negligence, actual or imputed. No person or representative is authorized to assume for the company any other liability in connection with the sale of this product. In no event shall the company be liable for indirect, incidental or consequential damages.

FCC Compliance

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference.
(2) this device must accept any interference received, including interference that may cause undesired operation.
Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
• Reorient or relocate the receiving antenna.
• Increase the separation between the equipment and receiver.
• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
• Consult the dealer or an experienced radio/TV technician for help.

Customer Service Toll Free: 1-888-921-4088
www.jensenmobile.com
©2021 Namsung America Inc.
NSC0121-V01