 


 
Software upgrade instructions

 
VER1.3

 
 
Remark: After upgrade, need to restore factory setting (Setup-->General-->Factory Reset) , then can arrange testing the new software.

Ready For Software

SOC update file : 

MCU update file : 

1、 SOC update : Put  into root of USB.

2、 MCU update : create a new , put  to update folder.then put the folder into root of USB.

Start To Update

1. SOC Update instructions :


(1). Reset the unit, then turn on /turn off the ILL more than 3 times in 4 seconds, need to be very fast.



(2).Usually, need to wait 25 seconds, you will see below interface (if more than 40 seconds still can not work, please use other USB to restart from the first step).




(3). Do not power off or take the USB off during the upgrade.

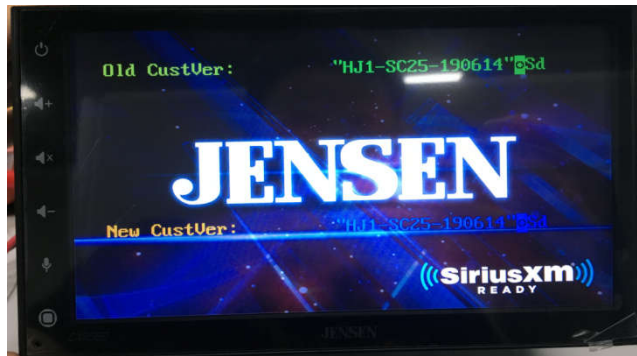


(4). After the upgrade is successful, power off and power on again.

2. MCU Update instructions :

(1). Open the unit and Click the **SETTING—ABOUT—SOFTWARE UPDATE—UPDATE**, then unit will upgrade automatically.

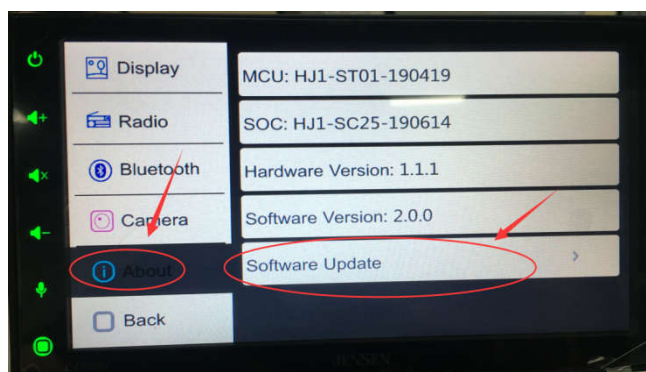

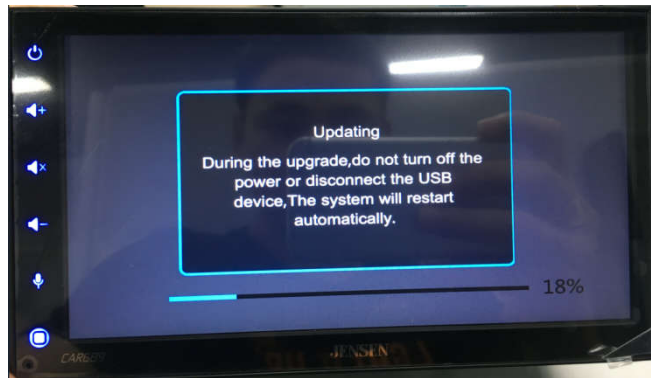

When the progress bar is completed, the system will automatically restart. Upgrade is complete.