

# **CMR2724**

# **QUICK START GUIDE**


Multimedia Receiver with Bluetooth featuring a 7" Touch Screen Display

This Quick Start Guide gives you the basics to start using your CMR2724. Please visit www.jensenmobile.com to download a complete owner's manual or call customer service at 1-888-921-4088 (Monday-Friday, 9AM-5PM EST).



Installation

Mounting Brackets Shown Are For Illustration Purposes (Not Included)

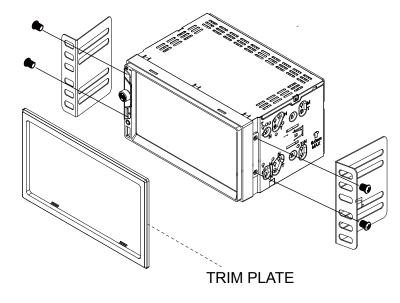


**TYPICAL 2-DIN INSTALLATION METHOD** 

### Copyright and Trademark Notes

The *Bluetooth*<sup>®</sup> word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. Siri and Apple are registered trademarks owned by Apple Inc. Google Assistant and Android are trademarks owned by Google LLC. Other trademarks and trade names are those of their respective owners.

## Wiring Diagram - Inputs/Outputs

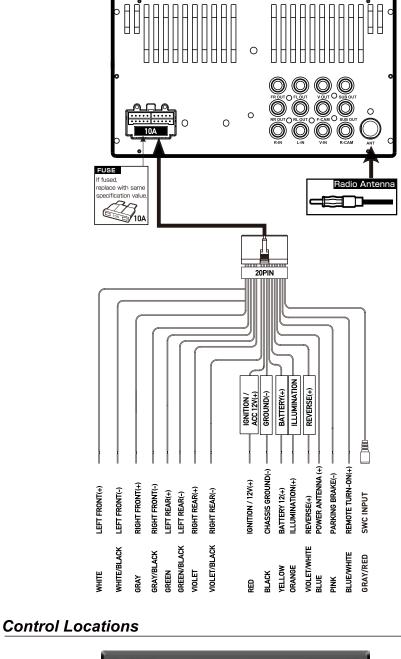





5. Tune/Track Down

OURCES

6. Reset

7. AUX

8. USB port

- 1. MIC
- 2. Short Press- Mode change
- Long Press- Voice Trigger
- 3. Tune/Track Up 4. Volume/Power/Mute

# Main Menu

In the Menu mode, press the desired icon to enter the corresponding mode: Radio, BT Phone, USB, BT Audio, Aux In, AV In, Camera, Settings.

## **General Operation**

Press the function icons to select the setup menu.



## Audio Operation

Press Sound Effect icon in the Settings menu to select EQ Presets, Surround Settings, Fader and Balance controls.

- 1. EQ Settings
- 2. Surround Mode Settings
- 3. Fader/Balance

## **USB** Operations

will read the USB device.

- 1. Previous Menu
- 2. Repeat
- 3. Random
- 4. Setup Menu 5. File List
- 6. Audio Setting
- 7. Track UP

## **Tuner Operation**

Select the Tuner icon from the Main Menu screen or press MODE until Tuner is selected.

- 1. Current Mode Indicator
- 2. Information Display
- 3. Tune Up 4. AS/PS
- 5. Stereo/Mono
- 6. Preset
- 7. Local/DX
- 8. Band
- 9. Tune Down

## **Bluetooth Operation**

**Bluetooth Microphone** The microphone is built-in to the receiver.

**Pairing and Connecting** 

- (3 meters) of the unit.
- use the power saving mode with the CMR2724.
- "Bluetooth function" is turned on.

Dialing a Number Press to display keypad and dial a number.

Making and Ending a Call Press **t** to connect a call, and press **r** to end a call.

**Transferring Audio** Press  $\square = \square$  to transfer audio between the head unit and mobile phone.

**Streaming Audio** Press **I** to play or pause the music. Press I to skip to the previous track. Press by to advance to the next track.

## Voice Activation Operation

is terminated



# Insert USB device in the USB slot, and the unit

- 8. Voice Activation
- 9. Play/Pause
- 10. Screen Dimmer
- 11. Track Down



Before using Bluetooth functions, you must pair your mobile phone to the receiver. The device name is "JENSEN CMR2724 ".

To ensure the best reception for pairing and re-connection, please make sure the mobile phone battery is fully charged before you begin.

• Try to perform pairing within a few minutes of the mobile phone being turned on. • Once the unit has been paired with the mobile phone, the unit's model number, "CMR2724", will be displayed on the mobile phone.

• To achieve the best performance, always keep the mobile phone within 10 feet

• Always keep a clear path between the mobile phone and the unit. Never place a metal object or any other obstacle between the mobile phone and the unit. · Some mobile phones may have a "Power Saving Mode" option. PLEASE DO NOT

· Before accepting or making a call, make sure your mobile phone's

• To ensure the best conversation quality/performance, stay within 3 feet (1 meter) of the unit's microphone when talking.



Bluetooth should be paired between your smartphone and the receiver. Press the voice activation button (2), and the receiver will switch into Bluetooth mode, This will activate Siri® or Google Assistant™ on your smartphone. You will need to manually switch back to the previous or desired mode once this operation

12:46

## **APP** Operation

The Jensen Smart App is the ultimate wireless remote control for your CMR2724 receiver. You can download the Jensen Smart app from the Apple App Store or Google Play Store and install it on your smartphone or tablet.

Please scan the following QR code to download Jensen J-Link P1 App to vour smart phone.



## Limited Three Year\* Warranty

This warranty gives you specific legal rights. You may also have other rights which vary from state to state. Jensen warrants this product to the original purchaser to be free from defects in material and workmanship for a period of three years from the date of the original purchase.

Jensen agrees, at our option, during the warranty period, to repair any defect in material or workmanship or to furnish an equal new, renewed, or comparable product (whichever is deemed necessary) in exchange without charges, subject to verification of the defect or malfunction and proof of the date of purchase. Subsequent replacement products are warranted for the balance of the original warranty period.

What is covered? This warranty covers all defects in the material and workmanship in this product. The following are not covered: software, installation/removal costs, damage resulting from accident, misuse, abuse, neglect, product modification, improper installation, incorrect line voltage, unauthorized repair, or failure to follow instructions supplied with the product, or damage occurring during return shipment of the product. Specific license conditions and copyright notices for the software can be found via www.jensenmobile.com.

Warranty Coverage \* Limited 3-year warranty. (Proof of purchase required) Extend your warranty from 3 years to 5 years when installed by the selling dealer and you register online at

### What to do?

1. Before you call for service, check the troubleshooting guide in your owner's manual. A slight adjustment of any custom controls may save you a service call.

2. If you require service during the warranty period, you must carefully pack the product (preferably in the original package) and ship it by prepaid transportation with a copy of the original receipt from the retailer to an authorized service center

. Please describe your problem in writing and include your name, a return UPS shipping address (P.O. Box not acceptable), and a daytime phone number with your shipment. 4. For more information and for the location of the nearest authorized service center please contact us by one

of the following methods

• Call us toll-free at (888) 921-4088 (Monday-Friday, 9:00 am, to 5:00 pm, EST)

 (Monday-Friday, 9:00 am, to 5:00 pm, EST)
E-mail us at cs@jensenmobile.com
Exclusion of Certain Damages: This warranty is exclusive and in lieu of any and all other warranties, expressed or implied, including without limitation the implied warranties of merchantability and fitness for a particular purpose and any obligation, liability, right, claim or remedy in contract or tort, whether or not arising from the company's negligence, actual or imputed. No person or representative is authorized to assume for the company any other liability in connection with the sale of this product. In no event shall the company be liable for indirect, incidental or connection with the sale of this product. In no event shall the company be liable for indirect, incidental or connection with the sale of this product. cidental, or consequential damages.

## FCC Compliance

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference.

(2) this device must accept any interference received, including interference that may cause undesired operation. Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- · Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help.